

Communication Cable USB to RS485 for EPSolar Viewstar and Landstar Charge Controller



- · USB to RS-485 converter cable is used to monitor each controller on the network using solar station PC software, update the firmware and change the controller parameters
- · The length of the cable is 1.5 m.
- ·The converter connect to the RS485 port on the controller to a USB port on the personal computer