


TELOX-M6 USB mode Switching Operation Manual

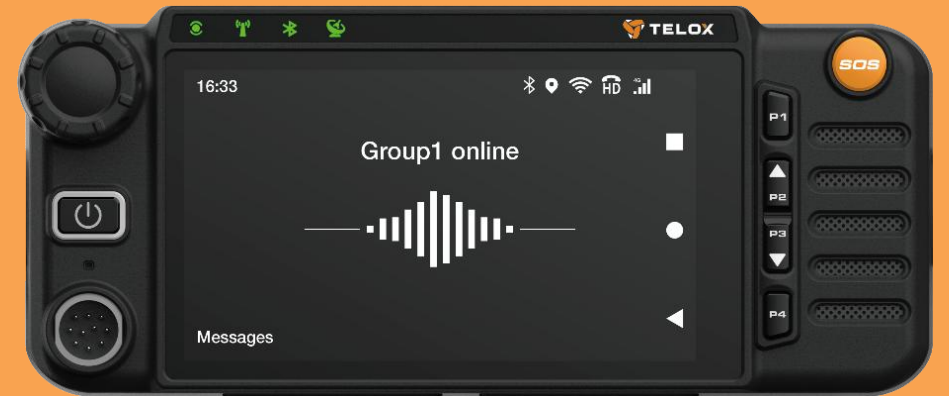

May 20th, 2021

Why need to switch USB mode for M6?


The M6's USB interface (whether it is USB-A or USB-C) will normally work in Host mode, which is to be compatible with more accessories and external storage.

When connecting to PC debugging or file transfer scenarios, the USB working mode of M6 needs to be switched from Host to Device.




Step 1

- 1.1 Connect the power cord and turn it on.
- 1.2 Enter the dialing interface.
- 1.3 Enter “***##*14789#*##***”

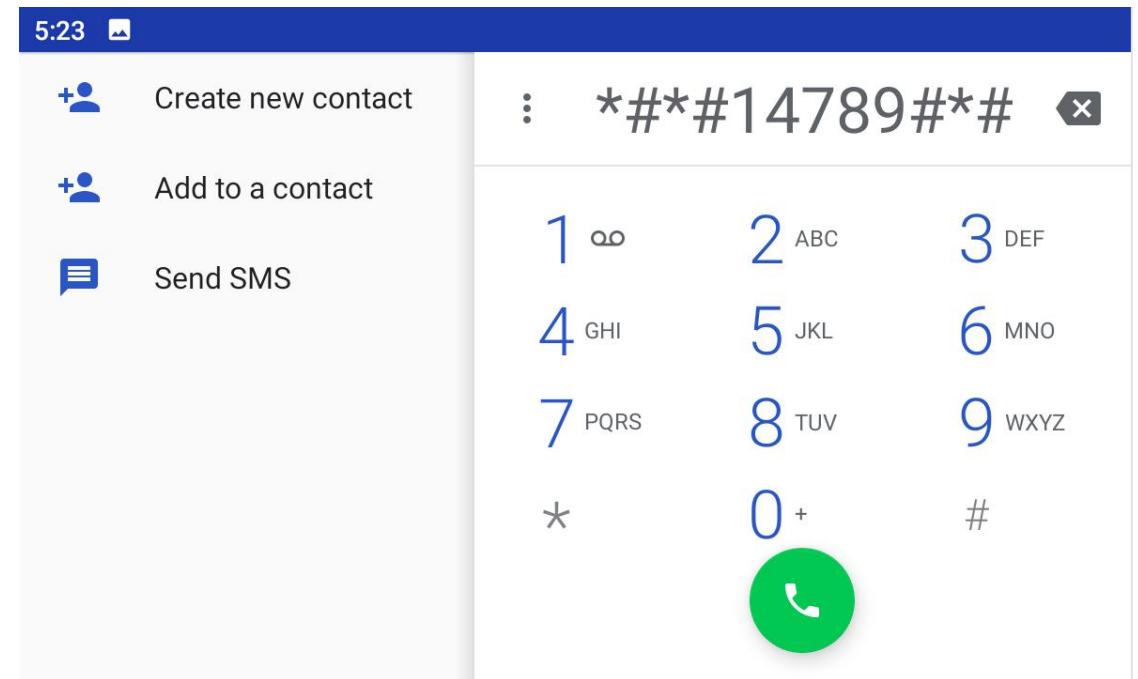


Steps 2

2. Select the second, “**USB SWITCH TO TYPEC for DEBUG** “. After the switch is successful, "current mode is USB DEVICE FOR TYPEC" will be displayed in the upper left corner of the screen

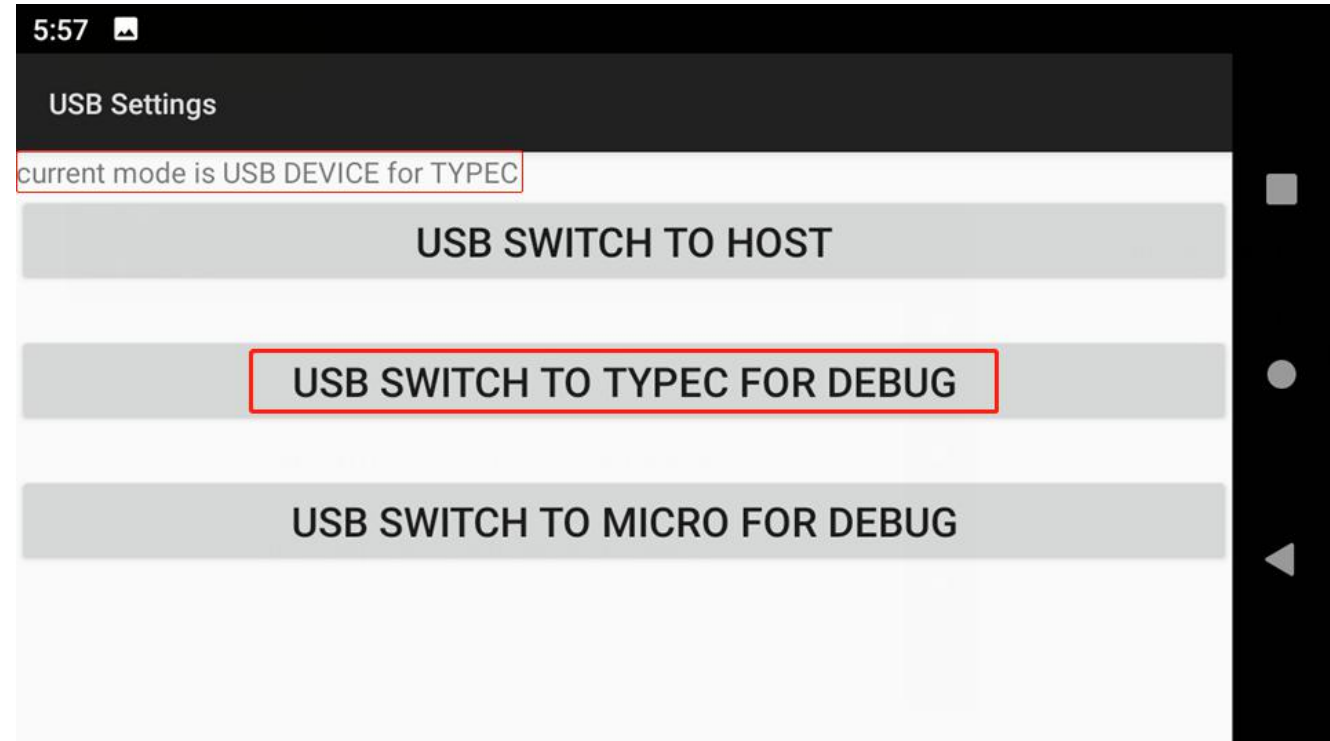

Steps3

3. Connect the PC and M6 (USB-C interface) with a USB cable. Then the screen on the right will be presented, tap the blue circle option to switch the function.

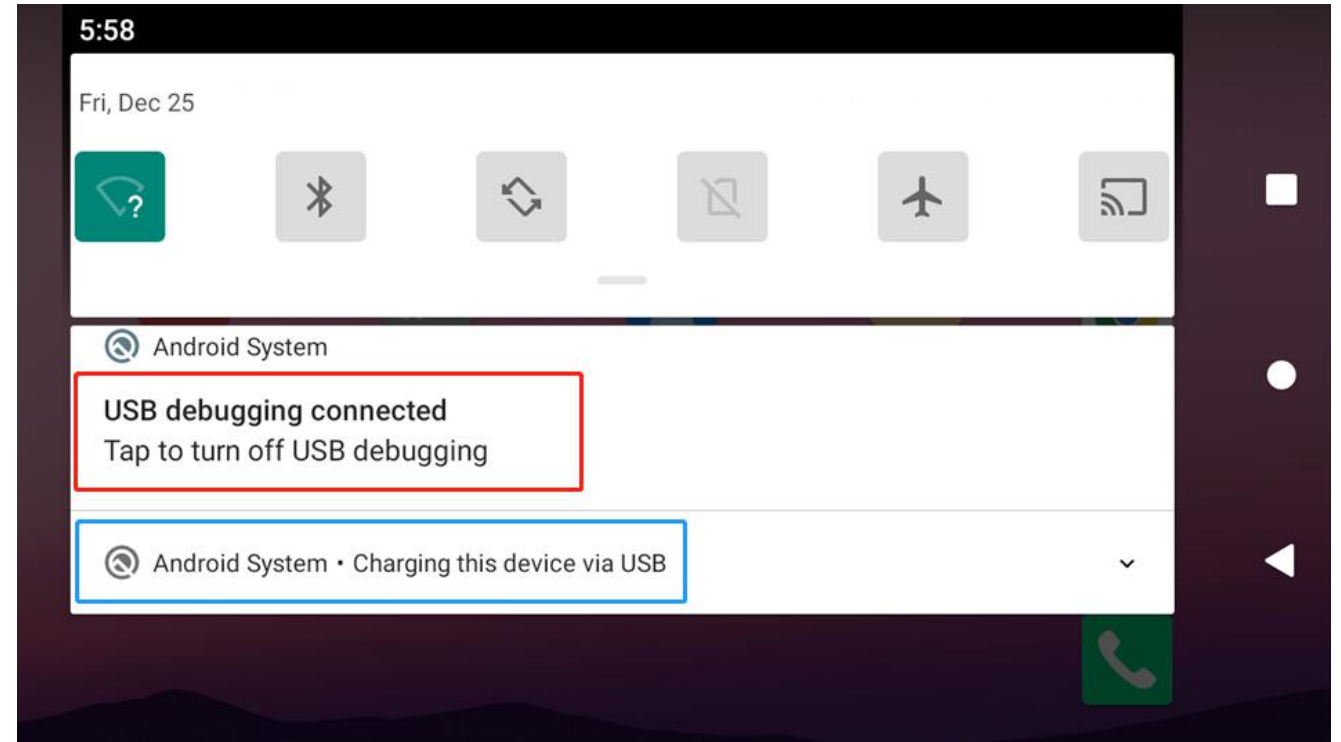

Steps 4

4. Select the function. You will see the M6 storage in your computer.

Warning !

Please note that after debugging or transmission, switch the mode to HOST through the same operation.

Otherwise, the communication may be affected (the US version only).

